9. Wring Diagram
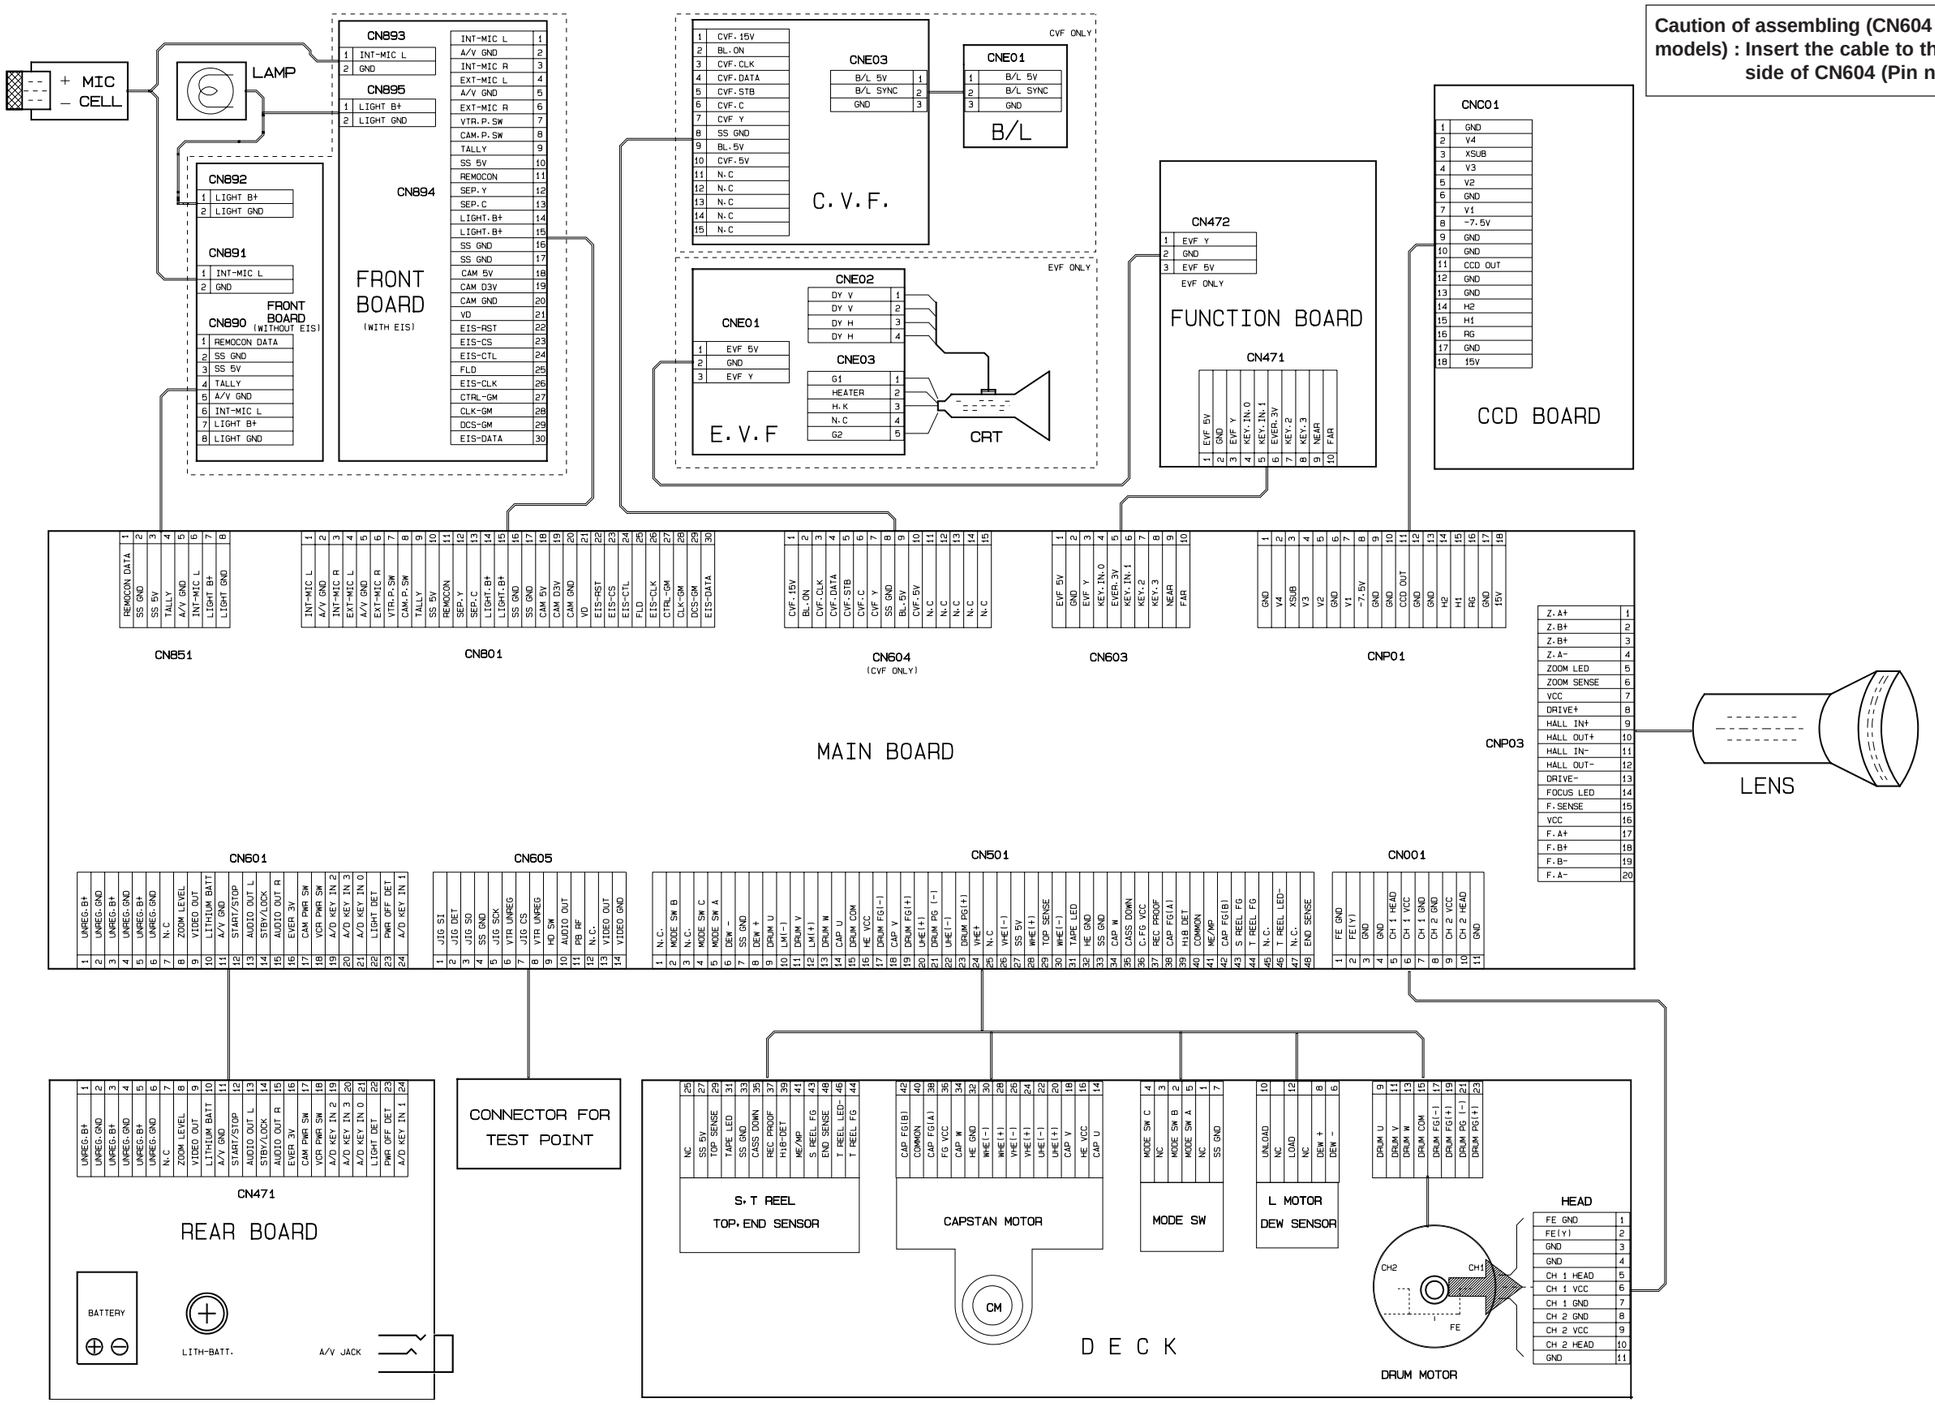
Caution of assembling (CN604 of the CVF models) : Insert the cable to the left most side of CN604 (Pin no.1 side)